



GETTING TO KNOW YOUR

2021 YUKON/XL & YUKON/XL DENALI

GMC

[gmc.com](https://www.gmc.com)

Review this Quick Reference Guide for an overview of some important features in your GMC Yukon/XL or Yukon/XL Denali. Some optional equipment described in this guide may not be included in your vehicle. More information can be found in your Owner's Manual and at [my.gmc.com](https://www.gmc.com). For easy reference, keep this guide with your Owner's Manual in your glove box.

Certain restrictions, precautions, and safety procedures apply to your vehicle.
Please read your Owner's Manual for complete instructions.



INSTRUMENT PANEL

- Electronic Parking Brake Switch
- Traction Control-StabiliTrak Off/ Park Assist/Auto Engine Stop-Start Disable/Power Outlet Enable/Lane Keep Assist/Hill Descent Control Buttons
- Head-Up Display Controls
- Cruise Control/Adaptive Cruise Control/Forward Collision Alert/Heated Steering Wheel Buttons
- Turn Signal/Windshield Wipers/Washer Lever
- Driver Information Center Controls/Voice Recognition Buttons



- Power Mirror/Power Window/Memory Seat Buttons
- 4WD/Drive Mode/Air Suspension Controls
- Exterior/Instrument Panel Lamp Controls
- Integrated Trailer Brake Control
- Audio Next/Previous Favorite Station Controls (behind steering wheel)
- Steering Wheel Adjustment Control
- Audio Volume Control (behind steering wheel)
- Engine Start/Stop Button

Symbols

- | | | |
|---------------------|----------------------------------|---------------------------|
| Low Fuel | Airbag Readiness | Antilock Brake System |
| BRAKE Brake System | PARK Electronic Parking Brake | Charging System |
| Cruise Control Set | Service Electronic Parking Brake | Driver Seat Belt Reminder |
| Security | Check Engine | Pass. Seat Belt Reminder |
| IntelliBeam | Traction Control Off | Low Tire Pressure |
| Engine Oil Pressure | Lights On Reminder | Power Outlet On |

Hazard
Warning
Flashers
Button

Electronic
Precision Shift
Transmission
Controls

Infotainment
System Touch
Screen

Infotainment
System
Controls



Climate
Control
Automatic
Operation

Driver's
Heated/
Ventilated
Seat
Buttons ♦

USB Ports/
Accessory
Power Outlet/
Wireless
Charging Pad ♦

Rear
Climate
Controls
On-Off/
Rear Display
Buttons

Climate
Control Fan
Speed/
Air Delivery
Modes

Passenger's
Heated/
Ventilated
Seat Buttons ♦

Climate Control Sync
Settings [Synchronize
passenger's settings
to driver's settings]

Denali model shown

-  4WD Mode
-  Hill Descent Control
-  Lane Keep Assist
-  Vehicle Ahead
-  Automatic Emergency Braking

-  Engine Coolant
-  Pedestrian Ahead
-  StabiliTrak Active
-  StabiliTrak Off
-  Trailer Sway Control
-  Door Ajar

Refer to your Owner's Manual to learn about the information being relayed by the lights, gauges and indicators on the instrument cluster.

See Introduction in your
Owner's Manual.

♦ Optional equipment

REMOTE KEYLESS ENTRY TRANSMITTER (KEY FOB)


Lock

Press to lock all doors and liftgate.

Unlock

Press to unlock the driver's door or all doors and liftgate.

Remote Windows[†]

Press and hold the  button until the windows are fully open. To enable, go to Settings > Vehicle > Remote Lock, Unlock, Start > Remote Window Operation.

Remote Mirrors[†]

To enable the automatic power folding mirrors, go to Settings > Vehicle > Comfort and Convenience > Remote Mirror Folding.

Power Liftgate[†]

Press twice to open or close the liftgate. Press once to stop the liftgate.



Rear Liftglass[†]

Press twice to open the rear liftglass.



Vehicle Locator/Panic Alarm

Press and release to locate your vehicle.

Press and hold to activate the alarm. Press again to cancel the alarm.

Remote Vehicle Start

Press twice to start the engine from outside the vehicle. After entering the vehicle, press the ENGINE START/STOP button.

- During a remote start, the engine will run for 15 minutes. Press the  button twice again for an additional 15 minutes.
- To cancel a remote start, press and hold the  button until the parking lamps turn off.

Note: To change the remote lock, unlock, and remote start settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS ACCESS SYSTEM

The Keyless Access System allows locking/unlocking of the doors and liftgate without removing the Remote Keyless Entry transmitter (key fob) from your pocket or purse. The key fob must be within 3 feet of the liftgate or the door being unlocked.

KEYLESS UNLOCKING

With the key fob within range:

- ▶ Press the button on the driver's door handle to unlock the driver's door or all doors and liftgate.
- ▶ Press the button on a passenger's door handle to unlock all doors and liftgate.

KEYLESS LOCKING

With the ignition off, the key fob removed from the vehicle, and all doors closed:

- ▶ Press the button on any door handle to lock all doors and liftgate immediately.
- ▶ If Passive Locking is turned on in the Settings menu, all doors and liftgate will lock automatically after a short delay.

Note: To change the door lock and unlock settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS (PUSHBUTTON) START

The Remote Keyless Entry transmitter (key fob) must be in the vehicle to turn on the ignition.

STARTING THE ENGINE

- ▶ With the vehicle in Park or Neutral, press the brake pedal and then press and hold the **ENGINE START/STOP** button to start the engine. The green indicator on the button will illuminate.



Note: If the key fob battery is weak, place the key fob in the center console left cupholder to enable the engine to start. Replace the key fob battery as soon as possible.

STOPPING THE ENGINE/OFF

- ▶ Shift to Park and press the **ENGINE START/STOP** button to turn off the engine.

ACCESSORY MODE

- ▶ With the engine off and the brake pedal not depressed, press the **ENGINE START/STOP** button to place the ignition in accessory mode to operate the radio, windows and other accessories with the engine off. The amber button indicator will illuminate. Press and hold the **ENGINE START/STOP** button for several seconds to place the ignition in Service Mode to operate additional systems.

See Driving and Operating in your Owner's Manual.


AUTO ENGINE STOP/START OPERATION

The fuel-saving Engine Stop/Start system automatically turns off the engine, referred to as an Auto Stop, when the brake pedal is pressed and the vehicle is at a complete stop, if certain operating conditions are met. In Auto Stop mode, the tachometer will read AUTO STOP. When the brake pedal is released or the accelerator pedal is pressed, the engine will restart. After parking the vehicle and turning off the engine, the tachometer will read OFF.

The engine may remain running or restart when the vehicle is stopped if:

- A minimum vehicle speed was not reached prior to stopping.
- The engine or transmission is not at the required operating temperature.
- The outside temperature is not in the required operating range.
- The shift lever is in any gear other than Drive (D).
- The battery charge is low.
- The climate control system requires the engine to run based on the current settings.
- The Auto Stop has reached the maximum allowed time.

AUTO ENGINE STOP/START DISABLE

- ▶ Press the  button on the left side of the instrument panel to turn off the system. The button indicator turns off when the system is disabled.

The Auto Engine Stop/Start system is enabled each time the vehicle is started.

See Driving and Operating in your Owner's Manual.

ELECTRONIC PRECISION SHIFT TRANSMISSION

The Electronic Precision Shift transmission control switches are located on the center of the instrument panel. The selected gear position illuminates in red on the switch.

Park – Press the P button to shift to Park.

Reverse – Pull the R switch to shift to Reverse.

Neutral – Press and hold the N button to shift to Neutral.

Drive – Pull the D switch to shift to Drive.

Note: To place the transmission in Neutral for an extended period while using an automatic car wash, refer to Car Wash Mode in your Owner's Manual.

Denali model shown



ELECTRONIC RANGE SELECT MODE

Electronic Range Select Mode allows you to choose the top gear limit. It can be used to limit the vehicle's speed when driving on a downhill grade or towing a trailer.

1. With the transmission in D (Drive), press the L (Low) button.
2. Press the + (plus) or – (minus) button to increase or decrease the gear range available. The highest available gear is displayed on the Driver Information Center.

If vehicle speed is too high for the requested gear, the shift will not occur.

See Driving and Operating in your Owner's Manual.

DRIVER INFORMATION CENTER

The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle messages and system information.

DIC CONTROLS

Use the controls on the right side of the steering wheel to view the various menus.

- ▶ Press the ◀ or ▶ buttons (A) to move between the display pages.
- ▶ Rotate the thumbwheel (B) up or down to move through the menus.
- ▶ Press the thumbwheel to open a menu, select an item, or clear a message.



Fully equipped model shown

SELECT INFO PAGES†

1. Open the Info or Options menu.
2. Scroll to Info Page Options. Press the thumbwheel to enter the menu.
3. Scroll through the list of items.
4. Press the thumbwheel to select/deselect an item to display in the Info menu.



VEHICLE CUSTOMIZATION

Some features can be turned on/off or customized using the Settings menus on the infotainment screen, including Remote Start, Power Liftgate♦, Auto Heated/Ventilated Seats♦, Safety Alert Seat♦, Mirror Folding♦, Wipers and others.

1. Select Settings on the Home page.
2. Select the desired menu tab.
3. Select the desired feature and setting.
4. Press < Back to exit each menu.



See Instruments and Controls in your Owner's Manual.

MULTI-COLOR HEAD-UP DISPLAY♦

The Head-Up Display (HUD) projects some operating information on the windshield. The HUD controls are located on the left side of the instrument panel.

HUD

Lift up or press down to adjust the position of the display.

INFO

Press to select from 4 display views.

Brightness

Lift up or press down to brighten/dim the display. Hold down to turn off the HUD.




See Instruments and Controls in your Owner's Manual.


POWER FRONT SEATS

SET MEMORY POSITIONS♦

1. With the vehicle On and in Park, adjust the driver's seat and power outside mirrors♦ to the desired positions.
2. Press and release the **SET** button on the driver's door. A beep will sound.
3. Immediately press and hold button **1** or **2** until two beeps sound.

To store a seat position for exiting the vehicle, repeat these steps using the  Exit button instead of button 1 or 2.

RECALL POSITIONS

- ▶ Press and hold button **1**, **2** or  Exit until the set position is reached.
- ▶ To set the positions to be recalled automatically when the vehicle is turned On/Off, go to Settings > Vehicle > Seating Position > Seat Entry Memory and Seat Exit Memory. For exit recall, the driver's door must be opened.

♦ Optional equipment

See Seats and Restraints in your Owner's Manual.



REAR SEATS

2ND-ROW SEAT ADJUSTMENTS




- ▶ To slide a 2nd-row seat, lift the front lever (A) on the side of the seat cushion.
- ▶ To recline a 2nd-row seatback, lift the rear lever (B) on the side of the seat cushion and push on the seatback.
- ▶ To fold a 2nd-row seat, lift the rear lever (B) on the side of the seat cushion or, from the 3rd-row seat, pull the strap (C) on the bottom of the seatback. The seatback will fold forward. Lift the lever or pull the strap again to tumble the seat forward.
- ▶ To return the seat to the upright position, lift the seatback until it locks in place and then slide the seat rearward by lifting the front lever (A) on the side of the seat cushion.

Note: Do not slide the 2nd-row seat while folded.

POWER FOLDING 2ND-ROW SEATS[†]

1. Unbuckle the seat belts, make sure nothing is under or in front of the seats, and move the front seats forward enough to allow room for the folded seat.
 2. Press the  **Seat Release** button (D) on the panel behind each rear door or the  **2nd-Row Seat** button (E) in the rear cargo area. The seatback will fold forward.
 3. Press either button again to tumble the seat forward.
- ▶ To return the seat to the upright position, pull the seat down until it latches to the floor and then lift the seatback until it locks in place.

POWER FOLDING/UNFOLDING 3RD-ROW SEATS[†]

1. Unbuckle the seat belts, make sure nothing is on the seats, and move the 2nd-row seats forward enough to allow room for the folded seats.
 2. Press and hold the bottom of the  **3rd-Row Seat** button (F) in the cargo area or  **3rd-Row Folding Seat** button on the front overhead console to fold the seatback.
- ▶ To unfold the seat, press and hold the top of either  button.

CLEANING THE SEATS

 

The seats are easily cleanable. For best results, using a damp, soft microfiber cloth, gently rub from the outside edge of the soiled edge to the center.



See Seats and Restraints in your Owner's Manual.

POWER PROGRAMMABLE LIFTGATE♦

OPEN/CLOSE THE POWER LIFTGATE

- ▶ Press the  Power Liftgate button on the Remote Keyless Entry transmitter (key fob) twice.
- ▶ Press the  Power Liftgate knob (A) on the front overhead console.
- ▶ Press the touchpad (B) on the liftgate handle to open the liftgate.
- ▶ Press the button (C) next to the liftgate latch to close the liftgate.




PROGRAMMING THE LIFTGATE HEIGHT

1. Turn the Power Liftgate knob (A) to the 3/4 mode position.
2. Open the liftgate.
3. Adjust the liftgate manually to the desired height.
4. To save the setting, press and hold the button next to the liftgate latch (C) until the turn signals flash and a beep sounds.



HANDS-FREE OPERATION♦

- ▶ To open or close the liftgate hands-free, the key fob must be within 3 feet of the liftgate. Kick your foot straight up under the passenger's side of the rear bumper, right of center, to activate the liftgate. When the key fob is within 6 feet of the rear bumper, the GMC logo (D) is projected on the ground near the passenger's side of the rear bumper, indicating the kicking motion location. The logo is shown for 1 minute, depending on operating conditions.

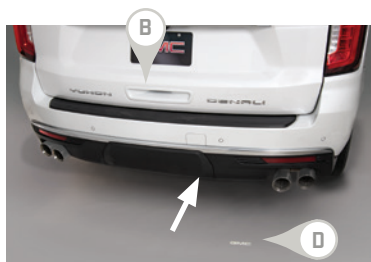

Note: To change the hands-free operation settings, go to Settings > Vehicle > Comfort and Convenience > Hands Free Liftgate on the infotainment screen.

See Keys, Doors and Windows in your Owner's Manual.

POWER RUNNING BOARDS♦

The Power Running Boards lower automatically when a door is opened and retract after the doors are closed.

- ▶ To turn the boards on or off, go to Settings > Vehicle > Running Boards > Automatic Running Boards.
- ▶ To deploy the boards for cleaning or to use the boards with the doors closed, with the vehicle in Park or Neutral, go to Settings > Vehicle > Running Boards > Deploy Running Boards.

See Keys, Doors and Windows in your Owner's Manual.

INFOTAINMENT SYSTEM

Read your Owner's Manual for important information about using the infotainment system while driving.

- Applications Tray: Shortcuts to applications
- Settings [◆]: System, Apps, and Vehicle settings menus
- Applications [◆]: Touch a screen icon to access an application
- Additional Pages: Swipe to view overview page or additional pages [if available]



Power/
Volume/
Mute

Home
page

Previous/Next
radio station or
track


BACK
Go back one
level in the
menus

Turn to tune stations
and highlight items/
Press to select items

Denali model shown

The infotainment system uses a Bluetooth or USB connection to link to a smartphone or other compatible device and offers hands-free voice control. For assistance, call 1-855-4-SUPPORT (1-855-478-7767) or visit my.gmc.com/how-to-support.

MANAGING HOME PAGE ICONS

1. Press the  Home button.
2. To enter edit mode, touch and hold the Home page icon to move.
3. Continue holding the icon and drag it to the desired position, and then release.

INFOTAINMENT SYSTEM

STORING FAVORITES

Radio stations from all bands (AM, FM, or SiriusXM) can be stored in any order. The audio source options are on the left side of the Audio page.

1. Tune in a radio station.
2. Select a desired page of favorite buttons.
3. Touch and hold one of the favorite buttons until a beep is heard.




SIRIUSXM[®] WITH 360L[♦]

SiriusXM with 360L provides subscribers an enhanced listening experience with unique satellite and streaming channels, on-demand content, personalized recommendations, and an interactive interface. Go to siriusxm.com for more details. For the full SiriusXM with 360L experience, OnStar Connected Access is required. Learn more at onstar.com.

WIRELESS APPLE CARPLAY AND WIRELESS ANDROID AUTO

Apple CarPlay or Android Auto capability is available through a compatible smartphone using the Apple CarPlay or Android Auto icon on the Home page.

1. Download the Android Auto app to your compatible phone from the Google Play Store. No app is required for Apple CarPlay.
2. To connect wirelessly, pair your smartphone to the in-vehicle Bluetooth system, and turn on wireless projection in your phone's settings.
Or to connect to a USB data port, use your smartphone's factory-provided USB cable. Aftermarket USB cables may not work.
3. The Apple CarPlay or Android Auto icon will illuminate when connected. Touch the icon to have your apps displayed.
 - ▶ To automatically launch Apple CarPlay or Android Auto when a Bluetooth-paired phone is connected, select Phone icon > Phones > ⓘ Information. Turn Apple CarPlay or Android Auto on or off.
 - ▶ To exit Apple CarPlay or Android Auto, press the  Home button. To return to Apple CarPlay or Android Auto, press and hold the Home button.

APPS[♦]

In-vehicle apps offering entertainment, news, weather, travel information, and more can be downloaded through the Apps icon on the Home page. Downloading and using the apps requires internet connectivity, and may require a data plan, accessed through the vehicle's 4G LTE Wi-Fi hotspot, if active, or a mobile device hotspot. For more information, visit my.gmc.com/how-to-support.

PERSONAL PROFILES

The Users icon allows for customized settings for up to 4 different user profiles. With your profile, your key can be used to automatically identify you and your settings.

- ▶ Touch the Users icon to sign in or create a new user profile. Follow the instructions.

See Infotainment System in your Owner's Manual.

BLUETOOTH® SYSTEM

Read your Owner's Manual for important information about using the Bluetooth system while driving.

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The vehicle must be stopped to pair a device. Not all devices will support all functions.

PAIR A PHONE


1. To use voice recognition, press the  **Press to Talk** button; after the prompt, say "Pair phone."

To use the infotainment screen, select Phone icon > Connect Phone > Add Phone.

2. Start the pairing process on your phone. From the phone's Bluetooth settings, select the name shown on the infotainment screen.
3. Follow the pairing instructions.
4. When pairing is complete, the phone screen is displayed.

SECONDARY PHONE

Multiple phones can be paired to the Bluetooth system. The system connects to the phone that is set to First to Connect. A secondary phone can receive calls only.

- ▶ To set the first and secondary phones, select the Phone icon > Phones >  Information.

See Infotainment System in your Owner's Manual.

4G LTE WI-FI® HOTSPOT◆


With the vehicle's available 4G LTE Wi-Fi hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet. For more information on use and system limitations, visit my.gmc.com/how-to-support.

- ▶ To retrieve the name and password for the hotspot, select the Wi-Fi Hotspot icon on the Home page or go to Settings > System > Wi-Fi Hotspot.

See Infotainment System in your Owner's Manual.

WIRELESS CHARGING◆


The Wireless Charging system for smartphones is located in front of the center console. To check mobile device compatibility, visit my.gmc.com/how-to-support. See your phone retailer for details on required phone accessories.

1. The vehicle must be On or Retained Accessory Power must be active.
2. Remove all objects from the charging pad.
3. Place the smartphone, face up, at the rear edge of the pad near the cupholders.
4. The  charging symbol will appear on the infotainment screen when charging.



REAR SEAT MEDIA SYSTEM◆



 
The Rear Seat Media system includes 2 touch-screens, 2 USB-C ports, 2 HDMI ports, and 2 wireless infrared headphones.

- ▶ To power on the system and view the Home page, double tap anywhere on either screen.
- ▶ To power on the system and control the screen sources from the front seats, select the Rear Media icon on the Home page of the infotainment screen.
- ▶ Video sources include the USB or HDMI ports located on the rear of the center console. Any USB port in the vehicle also can be used to provide content for the system.
- ▶ To enable the 110-volt outlet on the rear of the center console, with the vehicle On, press the  **Power Outlet** button on the left side of the instrument panel.



See Infotainment System in your Owner's Manual.

INTELLIBEAM LIGHTING SYSTEM

The IntelliBeam system automatically turns the high-beam headlamps on/off based on traffic conditions when the lamp control is in the AUTO or  Headlamps position and the system is activated, indicated by a green  indicator on the instrument cluster. A blue  indicator appears when the high-beam headlamps are on. The system is turned off if the high/low-beam changer or the flash-to-pass feature is used.





- ▶ To enable the IntelliBeam system, activate the high/low-beam changer on and then off within 2 seconds using the turn signal lever.

Note: IntelliBeam activates the high-beam headlamps only when driving over 25 mph.

See Lighting in your Owner's Manual.

ADAPTIVE CRUISE CONTROL-ADVANCED◆

The system enhances regular Cruise Control to maintain a following gap — the time between your vehicle and a vehicle detected directly ahead — by accelerating or braking automatically while you continue to steer.

- ▶ Press and hold the  Cancel button to switch between regular  Cruise Control and  Adaptive Cruise Control-Advanced.
- ▶ Use the steering wheel controls to set and adjust Cruise Control or Adaptive Cruise Control-Advanced.
- ▶ With Adaptive Cruise Control-Advanced active, press and release the  **Following Gap** button to select a gap setting of Far, Medium or Near.



See Driving and Operating in your Owner's Manual.

OVERHEAD CONSOLE FEATURES



Uplevel model shown

DOMELAMPS

- ▶ To turn a reading lamp on/off, press the lamp lens.
- ▶ To turn on/off all reading/dome lamps with the doors closed, press and hold any lens. The dome lamps will not turn on if the **OFF** button is pressed on the overhead console.

Refer to your Owner's Manual for more information about the Overhead Console features.

POWER SLIDING CENTER CONSOLE*

The Power Sliding Center Console moves rearward for additional storage options and easier access to rear console features.

- ▶ Press and hold the \wedge or \vee button on the front overhead console to move the center console rearward or forward.
- ▶ With the center console fully rearward, pull the lower handle (A) to pull out the lower storage compartment.
- ▶ With the console moved rearward, push forward on the center console armrest (B) to move it forward.



See Storage in your Owner's Manual.

DRIVER MODE CONTROL ◆/FOUR-WHEEL DRIVE ◆

DRIVER MODE CONTROL

The Driver Mode Control settings automatically adjust various vehicle control systems based on driving preferences, weather and road conditions. The modes are displayed on the Driver Information Center.

- ▶ Rotate the Driver Mode Control knob (A) on the left side of the instrument panel to select a mode.



4WD model shown


Normal – Use for normal driving.

Sport – Use for enhanced responsiveness on paved roads.

Snow/Ice (2WD only) – Use for enhanced traction during slippery conditions.

Off-Road (4WD only) – Use for enhanced control on unpaved roads or trails at moderate speeds.

Tow/Haul – Use to reduce shift cycling when towing or hauling heavy loads in stop-and-go traffic, rolling hills, or busy parking lots.

Terrain (4WD only) ◆ – Press the  button for enhanced control in low-speed off-road conditions. The system automatically provides light vehicle braking to simulate engine vehicle braking. Only available with the single-speed transfer case when in **4↑**.

FOUR-WHEEL DRIVE

Use the four-wheel drive buttons (B) on the left side of the instrument panel to shift into and out of four-wheel drive. The Driver Information Center displays the current status of the transfer case.



AUTO Automatic 4WD High – Use when traction conditions vary.

2↑ 2WD High – Use for most streets and highways.

4↑ 4WD High – Use when extra traction is needed or in most off-road driving.

Shift between **2↑**, **4↑**, and **AUTO** at normal driving speeds.



4↓ 4WD Low (2-Speed Transfer Case) ◆ – Use when driving off-road in deep sand, mud or snow, or on steep hills. Shift into or out of this mode when the vehicle is stopped or moving less than 3 mph with the transmission in Neutral. Shift the transmission into gear when the indicator light stops flashing.


N Neutral (2-Speed Transfer Case) ◆ – Use to dolly or dinghy tow the vehicle. Refer to your Owner's Manual for the shift procedure.


See Driving and Operating in your Owner's Manual.

AIR RIDE ADAPTIVE SUSPENSION


The Air Ride Adaptive Suspension offers load-leveling and adjustable ride height capabilities.

1. Press the  Ride Height button (A) to display the menu on the Driver Information Center.
2. Turn the knob (B) left or right to select a ride height in the menu.
3. To save the selection, press the  button again or wait for the menu to time out.

 **Normal Ground Clearance** – Use for normal driving.

 **Entry/Exit Ground Clearance** – Lowers the vehicle for easy entry and exit.

 **Increased Ground Clearance** – Raises the vehicle 1 inch from Normal. 4WD[◆] models only.

 **Maximum Ground Clearance** – Raises the vehicle 2 inches from Normal. 4WD[◆] models only. Vehicle must be in 4WD Low.

Aero – Automatically lowers the vehicle when vehicle speed exceeds 65 mph for a period of time to improve aerodynamics. This feature cannot be user selected.

- ▶ To have the vehicle automatically lower to the Entry/Exit height when the vehicle is shifted to Park, go to Settings > Vehicle > Ride Height > Automatic Entry/Egress.


Note: Heavy use of the air suspension may cause the system to temporarily suspend all height changes to allow the air compressor to cool down.



See Driving and Operating in your Owner's Manual.

HILL DESCENT CONTROL

Hill Descent Control sets and maintains vehicle speed from 1–19 mph while descending a steep incline in a forward or reverse gear.

1. Press the  Hill Descent Control button on the left side of the instrument panel. Vehicle speed must be below 37 mph to enable the system. The Hill Descent Control symbol will illuminate on the instrument cluster.
2. Increase or decrease speed by applying the accelerator or brake pedal or use the Cruise Control +/- switch on the steering wheel. The adjusted speed becomes the new set speed. The symbol flashes when the system is actively applying the brakes to maintain vehicle speed.




See Driving and Operating in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS


Safety or driver assistance features are no substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for important feature limitations and information.


To turn the following driver assistance systems on/off or to change the system settings, go to Settings > Vehicle > Collision/Detection Systems on the infotainment screen.


SAFETY ALERT SEAT[◆] – The driver's seat pulses — left, right, or both sides — to alert you of the direction of potential hazards. Audible alerts may be selected instead.


LANE CHANGE ALERT WITH SIDE BLIND ZONE ALERT[◆] – While driving, the system displays a  warning symbol on the left or right side mirror when a moving vehicle is detected rapidly approaching or is in a side blind zone. The symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.




AUTOMATIC EMERGENCY BRAKING – In detected potential imminent collision situations with vehicles directly ahead, the system can provide alerts and enhance driver braking or automatically apply hard emergency braking, if you have not already done so, to help reduce the severity or help avoid collisions at very low speeds.

FORWARD COLLISION ALERT – The  Vehicle Ahead indicator is green on the instrument cluster when a vehicle is detected and is amber when following a vehicle ahead much too closely. When approaching a detected vehicle directly ahead too rapidly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected).

▶ Press the  **Forward Collision Alert** button on the steering wheel to set the alert timing to Far, Medium, or Near.

FRONT PEDESTRIAN BRAKING – During daytime driving, the system detects pedestrians directly ahead and displays an amber  indicator on the instrument cluster. When approaching a detected pedestrian too quickly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected). The system may prepare the brakes or automatically apply hard emergency braking, if you have not already done so.

REAR PEDESTRIAN ALERT[◆] – During daytime driving with the vehicle in Reverse, the system can detect pedestrians directly behind the vehicle and will display an amber  indicator on the infotainment screen. When a pedestrian is detected close to the vehicle, the indicator flashes red and the Safety Alert Seat pulses or rapid beeps sound (if selected).

LANE KEEP ASSIST WITH LANE DEPARTURE WARNING[◆] – The system may help avoid collisions due to unintentional lane departures. The  Lane Keep Assist indicator is green on the instrument cluster if the system is available to assist. If the vehicle approaches a detected lane marking without using a turn signal in that direction, the system may assist by providing brief, gentle steering wheel turns and displaying an amber  indicator. If active driver steering is not detected, the amber  indicator may flash and the Safety Alert Seat may pulse or beeps may sound (if selected) on the side of the departure direction as the lane marking is crossed. In order to use this system safely, the driver needs to steer and be in complete control of the vehicle.


▶ To turn the system on or off, press the  **Lane Keep Assist** button on the left side of the instrument panel.

See Driving and Operating in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

FRONT AND REAR PARK ASSIST – During low-speed parking maneuvers, the system provides “distance to closest object” information on the Driver Information Center and the Safety Alert Seat pulses or a beep sounds (if selected). When an object is very close, the Safety Alert Seat pulses or 5 beeps sound (if selected).

REAR CROSS TRAFFIC ALERT♦ – When in Reverse, the system warns of cross-traffic coming in either direction by displaying a red alert on the infotainment screen and pulsing the left or right side of the Safety Alert Seat or sounding beeps (if selected).


- ▶ To turn Front and Rear Park Assist and Rear Cross Traffic Alert on or off, press the  **Park Assist** button on the left side of the instrument panel. To change the settings, go to Settings > Vehicle > Collision/Detection Systems.

HIGH DEFINITION REAR VISION CAMERA

When in Reverse, a view of the area behind the vehicle displays on the infotainment screen. Camera view buttons are at the bottom of the screen.

HIGH DEFINITION SURROUND VISION

Rear, front or side high-definition camera views along with a view of the area surrounding the vehicle are displayed on the infotainment screen when the vehicle is in Reverse or Drive below 8 mph. Camera view buttons are at the bottom of the screen.

- ▶ Surround Vision also can be activated by selecting the CAMERA icon on the Home page of the infotainment screen. Press the  **Home** button to exit the view.



See Driving and Operating in your Owner's Manual.

REAR CAMERA MIRROR

The Rear Camera Mirror provides a wider, less obstructed field of view to assist when driving, changing lanes and checking traffic conditions.

A. On/Off


Pull or push the lever at the bottom of the mirror to turn the video display on or off.

B. Selection Control

Press and release the button to select the brightness, zoom, or tilt feature.

C. ◀▶ Adjustment

Press and release either button to adjust the selected feature setting.


- ▶ Rotate the Rear Window Wiper control band to the  washer position to clean the Rear Camera Mirror lens and rear window.



See Keys, Doors and Windows in your Owner's Manual.

TRACTION CONTROL

The Traction Control system limits wheelspin in difficult driving conditions. The system turns on automatically every time the vehicle is started. Turn off Traction Control if the vehicle is stuck and rocking the vehicle is required.


- ▶ Press the  **Traction Control** button on the left side of the instrument panel to turn Traction Control off or on again.

See Driving and Operating in your Owner's Manual.

TRAILERING♦

TRAILERING APP♦

The in-vehicle trailering app on the infotainment screen includes a variety of helpful functions when towing a trailer, including hitching and setup checklists, trailer tire pressure monitoring♦, trailer light testing, customized trailer profiles, trailer theft detection (requires an active OnStar service plan♦) and more.

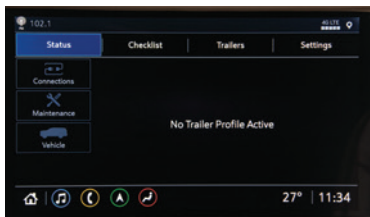

INTEGRATED TRAILER BRAKE CONTROL (ITBC)♦


The ITBC system can be used to adjust the amount of power output, or Trailer Gain, available to the trailer brakes. The control panel is located on the left side of the instrument panel. ITBC information is displayed on the ITBC page on the Driver Information Center.

- ▶ Squeeze the control together (right side does not move) to manually apply the trailer brakes.
- ▶ Adjust the Trailer Gain by pressing the +/- adjustment buttons on the control panel.



See Driving and Operating in your Owner's Manual.

TIRE PRESSURE MONITORING SYSTEM

The  Low Tire Pressure warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures listed on the Tire and Loading Information label, located on the driver's door opening below the door latch. **Current tire pressures can be viewed on the Driver Information Center.**

The Tire Fill Alert provides visual and audible alerts when inflating a tire to the recommended air pressure (excluding the spare tire). With the vehicle On, the horn sounds and the turn signals change from flashing to solid when the recommended pressure is reached.

See Vehicle Care in your Owner's Manual.

ROADSIDE ASSISTANCE

1-888-881-3302

TTY Users: 1-888-889-2438

As the owner of a new GMC, you are automatically enrolled in the GMC Roadside Assistance program for up to 5 years/60,000 miles, whichever occurs first, at no expense to you. GMC's Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year, to contact a service provider for light services (fuel delivery, jump-starts, flat tire and lock-outs) or make arrangements to tow your vehicle to the nearest GMC dealer for any repairs.

OnStar® Roadside Assistance

If you have a current OnStar Safety & Security plan, push the blue **OnStar** button or red **Emergency** button to get the help you need. An OnStar advisor will use GPS technology to pinpoint your vehicle location and contact the nearest service provider.

To learn more about OnStar services, press the blue **OnStar** button, visit onstar.com, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

MYGMC MOBILE APP

Download the myGMC app to your compatible smartphone (or device) and, if your vehicle is properly equipped, you can start or turn off your engine, lock or unlock your doors, view key diagnostic information, set parking information and more.

The app is available on select Apple and Android devices. Service availability, features and functionality vary by vehicle, device and data plan. Device data connection required. Visit onstar.com for more details. Download the mobile app from your compatible mobile device's app store.

GMC OWNER CENTER

Get to know your vehicle inside and out with the GMC Owner Center. Check out personalized information including an online Owner's Manual and helpful how-to videos, track your service history and warranty status, manage your OnStar and Connected Services vehicle plans, review your current Vehicle Diagnostics report (active service account required) and more. Create an account today at my.gmc.com.

We recommend always using ACDelco or GM Genuine Parts.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2020 General Motors. All rights reserved.



GENERAL MOTORS

84266988 A