



# XT6

## CONVENIENCE & PERSONALIZATION GUIDE

2023

[cadillac.com](https://www.cadillac.com)

 


---

Review this quick reference guide for an overview of some important features in your Cadillac XT6. Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. More information can be found in your Owner's Manual and at [cadillac.com/owners](https://www.cadillac.com/owners).

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions.

# INSTRUMENT PANEL

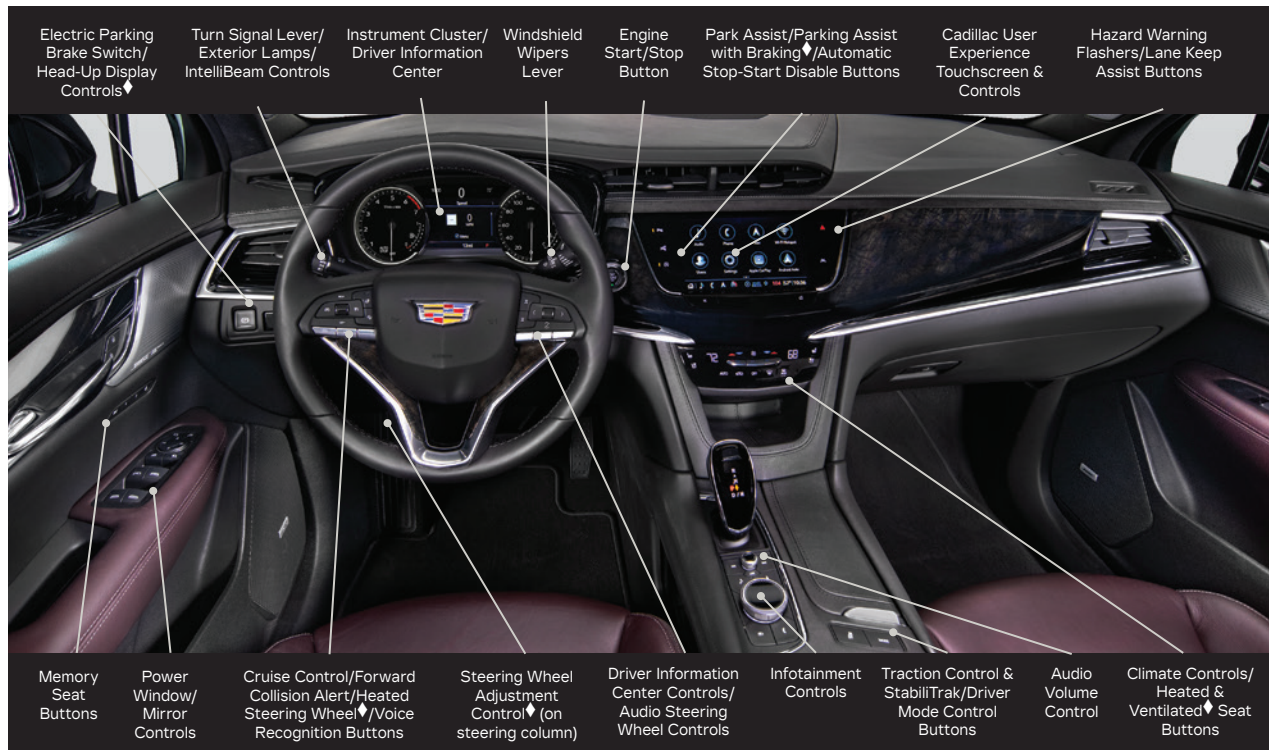

Due to current supply-chain shortages, certain features shown have limited or late availability, or are no longer available. See the window label or your dealer regarding the features on an individual vehicle.

See Introduction in your Owner's Manual.

## REMOTE KEYLESS ENTRY TRANSMITTER (KEY FOB)



Press to lock all doors.

Press and hold for 1 second to fold the power mirrors.





Press to unlock the driver's door only or all doors.

Press and hold for 1 second to unfold the power mirrors.

Press and hold to open all windows.



Press and release the  Lock button and then immediately press and hold the  button to start the engine.



Press and release to locate your vehicle. The exterior lamps flash and the horn chirps 3 times.

Press and hold for 3 seconds to activate the alarm. Press again to cancel the alarm.



Press twice to open or close the power liftgate. Press once to stop power operation.

### Door/Glove Box Key

Press the button (A) on the side of the transmitter to pull out the key. Refer to your Owner's Manual for instructions to remove the key cylinder cap on the driver's door handle.

**Note:** To change or enable some Remote Lock and Unlock settings and Remote Start settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.

See Keys, Doors and Windows in your Owner's Manual.



## KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the doors and liftgate without removing the Remote Keyless Entry (RKE) transmitter from your pocket or purse. The transmitter must be within 3 feet of the door being unlocked/locked or within 3 feet of the liftgate.

### Keyless Unlocking

With the RKE transmitter within range:

- ▶ Press the button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors.
- ▶ Press the button on a passenger door handle to unlock all doors.
- ▶ Press the touch pad above the license plate to open the liftgate.



**Note:** To change the Keyless Unlocking settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.

### Keyless Locking

With the ignition off, the RKE transmitter removed from the vehicle, and all doors closed:

- ▶ Press the button on any door handle to lock all doors and the liftgate immediately.
- ▶ If Passive Locking is turned on in the Settings menu, all doors and the liftgate will lock automatically after a short delay.

**Note:** To change the Keyless Locking settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.

See Keys, Doors and Windows in your Owner's Manual.

## KEYLESS START

The Remote Keyless Entry (RKE) transmitter must be in the vehicle to turn on the ignition.

### START

- ▶ With the vehicle in Park or Neutral, press the brake pedal and then press the ENGINE START/STOP button to start the engine. The green indicator on the button will illuminate.



**Note:** If the RKE transmitter battery is weak, place the transmitter in the pocket in the center console storage compartment to enable the engine to start. Replace the transmitter battery as soon as possible.

### STOP/OFF

- ▶ Shift to Park and then press the ENGINE START/STOP button to turn off the engine.

Power will be available for 10 minutes to operate the audio system until the driver's door is opened and to operate the windows and sunroof until any door is opened.

### ACCESSORY

- ▶ With the engine off and the brake pedal NOT depressed, press the ENGINE START/STOP button to place the ignition system in the Accessory mode. The amber indicator on the button will illuminate.

See **Driving and Operating in your Owner's Manual.**

## AUTO ENGINE STOP/START


The fuel-saving stop/start system automatically turns off the engine, referred to as an Auto Stop, when the brake pedal is pressed and the vehicle is at a complete stop, if certain operating conditions are met. In Auto Stop mode, the tachometer will read AUTO STOP. When the brake pedal is released or the accelerator pedal is pressed, the engine will restart. After parking the vehicle and turning off the engine, the tachometer will read OFF.



The engine may remain running or restart when the vehicle is stopped if:

- A minimum vehicle speed was not reached prior to stopping.
- The engine or transmission is not at the required operating temperature.
- The outside temperature is not in the required operating range.
- The shift lever is in any gear other than Drive (D).
- The battery charge is low.
- The climate control system requires the engine to run based on the current settings.
- The Auto Stop has reached the maximum allowed time.

### AUTO ENGINE STOP/START DISABLE

- ▶ Press the  button on the center of the instrument panel when the engine is running to turn off the automatic stop/start system. The button indicator is illuminated when the system is on.

The system is turned on each time the vehicle is started.

See **Driving and Operating in your Owner's Manual.**

## ELECTRONIC PRECISION SHIFT

The automatic transmission shift pattern is displayed on the shift lever with the selected gear position illuminated in red. The shift lever always starts in the center position and, after shifting, returns to the center position.



**Park** – Press the button (A) on top of the lever to shift into Park. To shift out of Park, press and hold the shift-lock button (B) on the side of the lever while selecting the desired gear.

**Reverse** – Press and hold the shift-lock button (B) and move the lever forward completely (pass the detent) to shift into Reverse.

**Neutral** – Move the lever forward (to the detent) to shift into Neutral.

**Note:** The transmission will not stay in Neutral for an extended period. It will automatically shift into Park. See Automated Car Wash Mode.

**Drive** – Move the lever rearward to shift into Drive

**Tap Shift Mode** – With the transmission in Drive, pull back on the shift lever to shift manually. Pull the left steering wheel paddle to downshift and the right steering wheel paddle to upshift. Pull back on the shift lever again to return to Drive.

### Automated Car Wash Mode

There are different procedures for placing the transmission in Neutral with the engine on or off, and if the driver exits the vehicle. Refer to your Owner's Manual for each procedure.

See Driving and Operating in your Owner's Manual.

◆ Optional equipment

## DRIVER MODE CONTROL

Driver Mode Control automatically adjusts the steering, suspension and powertrain tuning in real time. Pressing the MODE button on the center console displays the mode menu on the instrument cluster and activates the next available mode.



### ALL-WHEEL-DRIVE (AWD) OPERATION◆

On AWD models, the vehicle can operate in front-wheel drive or all-wheel drive.

- ▶ Press the MODE button to select Tour (front-wheel drive), AWD, Sport, or Off-Road mode.

If the vehicle is turned off while in Tour or AWD mode, it will stay in that mode the next time the vehicle is started. If in Sport or Off-Road mode, the vehicle defaults to Tour mode when restarted.

### FRONT-WHEEL-DRIVE (FWD) OPERATION

- ▶ Press the MODE button to select Tour, Sport, or Snow/Ice mode.

The vehicle defaults to Tour mode each time the vehicle is started.

See Driving and Operating in your Owner's Manual.

## ELECTRIC PARKING BRAKE

- ▶ To apply the parking brake, press the (P) parking brake switch on the left side of the instrument panel.
- ▶ To release the parking brake, turn on the ignition, press the brake pedal, and then press the (P) switch.

See Driving and Operating in your Owner's Manual.

Some equipment shown may not be included in your vehicle.

# STEERING WHEEL CONTROLS

**Note:** Refer to the Super Cruise Convenience & Personalization Guide for information on Super Cruise◆ functionality.

## A. CRUISE CONTROL/ ADAPTIVE CRUISE CONTROL◆

 **On/Off**

### SET- Set Speed

With Cruise Control on, rotate the thumbwheel down to set a speed.

### RES+ Resume Speed

With Cruise Control on, rotate the thumbwheel up to resume the set speed.

### Adjust Speed

With a cruise speed set, rotate the thumbwheel up or down to the detent to increase or decrease the set speed by 1-mph increments; rotate past the detent to increase or decrease the set speed to the next 5-mph interval on the speedometer.

 **Cancel**

Press to cancel Cruise Control without erasing the set speed from memory.

Press and hold to switch between Cruise Control and Adaptive Cruise Control◆.


 **Follow Distance Gap  
(Adaptive Cruise Control◆)**

Press to select a targeted gap setting of Far, Medium, or Near — the time between your vehicle and a vehicle detected directly ahead.

See Driving and Operating in your Owner's Manual.



## B. VOICE RECOGNITION

 **Push to Talk**

Press to answer an incoming call or to use voice recognition with the OnStar, Bluetooth or infotainment system.

 **End Call/Mute**

 
Press to end/decline a call or mute the speakers.

See Infotainment System in your Owner's Manual.

## C. HEATED STEERING WHEEL◆



 **On/Off**

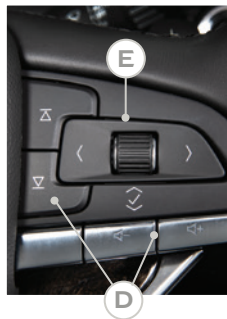See Instruments and Controls in your Owner's Manual.





## D. AUDIO CONTROLS

 **Volume**

Press  or  to adjust the volume.




 **Next/Previous**

Press  or  to go to the next or previous favorite radio station or track.

See Infotainment System in your Owner's Manual.

## E. DRIVER INFORMATION CENTER CONTROLS

 **Left/Right**

Press  or  to move to a display zone or menu. Press  to exit a menu.

 **Up/Down**

Rotate the thumbwheel up or down to move through the menus.

 **Select**

Press the thumbwheel to open a menu, select or reset an item, or clear a message.

See Instruments and Controls in your Owner's Manual.

## DRIVER INFORMATION CENTER

The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle information.

### DIC MENUS

Use the controls on the right side of the steering wheel to view the DIC menus.

 
**Info** – display trip and fuel information

**Audio** – browse music and change the audio source

**Navigation** – view active route and change prompts


**Phone** – view active call and scroll through contacts

**Options** – change display information

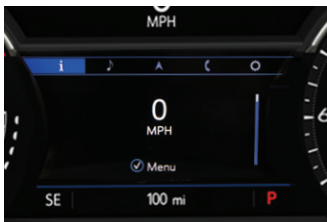

### SELECT INFO PAGES

 1. Use the controls to open the Options menu.
2. Scroll to Info Pages. Press the ✓ thumbwheel to enter the menu.
3. Use the thumbwheel to scroll through the list of items.
4. Press the thumbwheel to select or deselect an item to display on the Info menu.

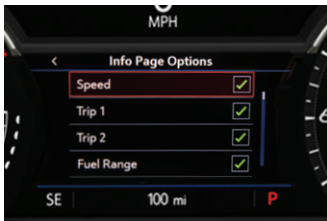

See Instruments and Controls in your Owner's Manual.

## MULTI-COLOR HEAD-UP DISPLAY

The Head-Up Display (HUD) projects some operating information on the windshield. Temporary information, such as audio changes and navigation maneuvers, also may be displayed. The HUD controls are located on the left side of the instrument panel.

### HUD

Lift up or press down to adjust the position of the image. It cannot be adjusted side to side.



### INFO

Press to select from four displays: Speed View; Audio/Phone View; Navigation View; or Performance View.

### Brightness

Lift up to brighten or press down to dim the display. Hold down to turn off the display.

### ROTATION OPTION

- ▶ To adjust the angle of the HUD, use the DIC controls to view Options > Head-Up Display and select Adjust Rotation. Rotate the DIC thumbwheel up or down to adjust the angle. Select OK to save the setting.



See Instruments and Controls in your Owner's Manual.

# CADILLAC USER EXPERIENCE CONTROLS

Read your Owner's Manual for important information about using the infotainment system while driving.

Your XT6 offers a variety of entertainment, communication and vehicle system options. Touch an application icon on the touchscreen or use the rotary controller and buttons to access an item. You can use simple gestures on the touchscreen, such as tap, drag, pinch and spread, to interact with the infotainment system. Link a compatible smartphone, USB flash drive or portable audio player/iPod® to the infotainment system using a Bluetooth or USB connection. For assistance, call 1-855-428-3669 or visit [cadillac.com/support](http://cadillac.com/support).

Applications Tray:  
Shortcuts  
to commonly  
used apps

Additional Pages:  
Swipe to display  
overview page or  
additional pages of apps  
(if available)

Applications:  
Touch a screen  
icon to access  
an app



Mute/Unmute  
speakers

Home  
page

Audio  
menu

Rotate to  
adjust the  
volume

Press to seek the  
previous or next radio  
station or track

Navigation  
menu or  
Phone menu



Controller:  
Rotate to move on the screen/Move  
knob (left, right, up, or down) to go to the  
next item or group on the screen/Press  
to select an item

Return to  
previous  
menu

Phone  
menu or  
Home page

See Infotainment System in your Owner's Manual.

 


# CADILLAC USER EXPERIENCE FEATURES

## STORING STATION FAVORITES

Radio stations from all bands (AM, FM or SiriusXM♦) can be stored in any order.

1. Display the desired radio station. Audio sources are on the left side of the page.
2. Touch and hold a favorite screen button. Favorites also can be saved by touching the ★ in a station list.
3. Repeat the steps to store another favorite item.

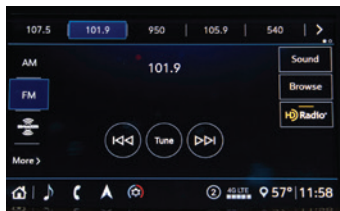

## PORTABLE AUDIO DEVICES

USB ports for data and charging are located in the center console storage compartment.

- ▶ Connect an iPod®, iPhone®, MP3 player, a USB flash drive or a USB mass storage device to the USB port.
- ▶ Touch Audio, and then touch More, if necessary, to select the USB device.

## SIRIUSXM® WITH 360L♦

The personalized content of SiriusXM with 360L offers more than 200 channels, including ad-free music, sports, comedy, talk and news, along with access to On Demand shows, performances and interviews. Certain features require a SiriusXM subscription and a Connected Access plan. See [siriusxm.com](http://siriusxm.com) and [onstar.com](http://onstar.com) for details.

## APPLE CARPLAY® AND ANDROID AUTO™†

Apple CarPlay or Android Auto capability is available through a compatible smartphone using the Apple CarPlay or Android Auto icon on the Home page.

1. Download the Android Auto app to your compatible smartphone from the Google Play Store. No app is required for Apple CarPlay.
2. There are two ways to set up device projection while parked:
  - Wireless Connection – Connect your smartphone by pairing it to the in-vehicle Bluetooth system. Turn on wireless Apple CarPlay or Android Auto in your phone's settings.
  - Wired Connection – Connect your smartphone to a USB data port using the USB cable provided with the phone. Aftermarket USB cables may not work.
3. Follow the instructions on the infotainment system and the smartphone.
4. The Apple CarPlay or Android Auto icon will illuminate when connected. Touch the icon to have your apps displayed.
  - ▶ To exit Apple CarPlay or Android Auto, press the Home button. To return to Apple CarPlay or Android Auto, press and hold the Home button.

See **Infotainment System** in your **Owner's Manual**.

†Android and Android Auto are trademarks of Google LLC; Apple CarPlay is a trademark of Apple Inc. User terms and privacy statements apply.

 
# CADILLAC USER EXPERIENCE FEATURES

## IN-VEHICLE APPS◆

In-vehicle apps offering entertainment, news, weather, travel information and more, including Amazon Alexa Built-in, are available on the infotainment screen or can be downloaded through the Apps icon. Downloading and using the apps requires internet connectivity and may require a data plan, accessed through the vehicle's available 4G LTE Wi-Fi Hotspot, if active, or a mobile hotspot. Go to [onstar.com](http://onstar.com) for data plan information.

## VOICE RECOGNITION

Control the music source, enter a navigation destination◆, make phone calls hands-free, and perform other tasks using the natural voice recognition system.

1. Press the  Push to Talk button on the steering wheel.
2. The system will play a prompt.
3. After the prompt, say what you want it to do.
  - Examples: "Call Dave" or "Tune to 99.5 FM."
  - Say "Help" for voice recognition assistance.




See Infotainment System in your Owner's Manual.

# BLUETOOTH® SYSTEM

Read your Owner's Manual for important information about using the Bluetooth system while driving.


To use a Bluetooth-enabled device, it must be paired with the in-vehicle Bluetooth system. Not all devices will support all functions. The pairing process is disabled when the vehicle is moving. For more information, visit [cadillac.com/support](http://cadillac.com/support).

## PAIR A PHONE

1. To use voice recognition, press the  Push to Talk button; after the tone, say "Pair Phone." To use the infotainment screen, select the Phone icon > Connect Phone > Add Phone.
2. Start the pairing process on your phone. From the Bluetooth settings, select the name shown on the infotainment screen.
3. Follow the pairing instructions.
4. When pairing is complete, the phone screen is displayed.

## SECONDARY PHONE

A secondary phone can be paired to the Bluetooth system. The system connects to the phone that is set to First to Connect. The secondary phone can only receive calls.

- ▶ To set the first and secondary phones, go to Settings > System > Phones and select the  Information icon.

## BLUETOOTH VOICE RECOGNITION

Bluetooth Voice Recognition allows access to the voice recognition commands on a compatible, paired phone (Siri or Google Assistant).

- ▶ To activate Bluetooth Voice Recognition, press and hold the  Push to Talk button.

See Infotainment System in your Owner's Manual.

## WIRELESS PHONE CHARGING

The Wireless Phone Charging system is located under the center console armrest. To check mobile device compatibility, visit [cadillac.com/support](http://cadillac.com/support). See your phone retailer for required phone accessories or charging adapters.



1. The vehicle must be On or Retained Accessory Power must be active.
2. Remove all objects from the charging pocket.
3. Place the smartphone, screen up, in the pocket.
4. The ⚡ battery charging symbol will display on the infotainment screen. If not charging, remove the smartphone for 3 seconds, and rotate it 180 degrees, before reinserting it in the charging pocket.

See Instruments and Controls in your Owner's Manual.

## 4G LTE WI-FI® HOTSPOT

With the vehicle's available built-in 4G LTE Wi-Fi Hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet.

- ▶ To retrieve the name and password for the hotspot, select the Wi-Fi Hotspot icon on the infotainment screen or go to Settings > System > Wi-Fi Hotspot.

For more information on use and system limitations, visit [cadillac.com/support](http://cadillac.com/support).

See Infotainment System in your Owner's Manual.

◆ Optional equipment

## VEHICLE CUSTOMIZATION

Many vehicle features can be turned on/off or customized using the Settings menus on the infotainment screen. The Settings menus include System, Apps and Vehicle.

1. Touch Settings on the Home page.
2. Select the desired menu item.
3. Select the desired feature and setting.
4. Touch < Back to exit each menu.



See Instruments and Controls in your Owner's Manual.

## UNIVERSAL REMOTE SYSTEM

 
The Universal Remote System on the overhead console enables your vehicle to control 3 different devices, ranging from garage doors and gates to home lighting. Go to [homelink.com](http://homelink.com) for detailed videos and instructions on how to program the Universal Remote System. For additional assistance, call 1-800-355-3515.

See Instruments and Controls in your Owner's Manual.

# CLIMATE CONTROLS

## FRONT CLIMATE CONTROLS

The climate control settings can be adjusted using the climate control buttons or the infotainment screen.

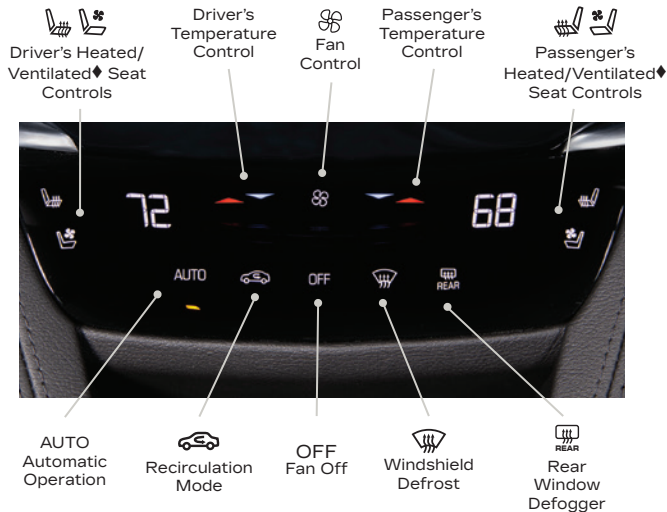

## AUTOMATIC OPERATION

- ▶ Press AUTO. The system automatically controls the fan speed, air delivery, air conditioning and recirculation to reach the set temperature.

 
## SYNC TEMPERATURE SETTINGS

- ▶ Touch SYNC on the infotainment climate control screen to synchronize all climate zone settings to the driver's settings.

## REAR CLIMATE CONTROLS

The rear climate control settings can be adjusted using the rear climate control buttons or the infotainment screen.

- ▶ To lock/unlock the rear seat controls, select the Rear Climate Controls on the infotainment screen and then touch Rear Control Lockout.

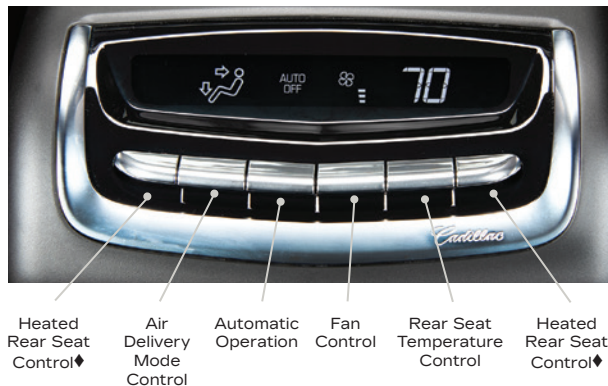

## AIR IONIZER

The air ionizer, which removes contaminants such as pollen and dust to help clean the air inside the vehicle, turns on automatically with the climate control system.

- ▶ To turn on or off, go to Settings > Vehicle > Climate and Air Quality > Ionizer.

See Climate Controls in your Owner's Manual.

## EXTERIOR LIGHTING



Rotate the control band to activate the exterior lamps.

 **Off/On**




### AUTO Automatic Headlamp System

Automatically activates the Daytime Running Lamps (DRLs) or the headlamps and other exterior lamps depending on outside light conditions.

 **Parking Lamps**

 **Headlamps**

 **IntelliBeam System**

The IntelliBeam system automatically turns the high-beam headlamps on/off based on traffic conditions at night. Press the button on the end of the lever with the lamp control in the AUTO or  Headlamps position to turn the system on or off. A green  indicator displays on the instrument cluster when the system is on; a blue  indicator displays when the high-beam headlamps are on.

**Note:** IntelliBeam activates the high-beam headlamps only when driving more than 25 mph.

See Lighting in your Owner's Manual.

◆ Optional equipment

## WINDSHIELD WIPERS



Move the lever up or down to activate the windshield wipers.

**HI Fast Wipes**

**LO Slow Wipes**

**INT Intermittent Wipes/AUTO Rainsense™ Sensitivity◆**

Rotate the band up for more frequent wipes or down for less frequent wipes. To turn Rainsense mode on or off, go to Settings > Vehicle > Comfort and Convenience > Rainsense Wipers.

**OFF**

**1x Single Wipe**

 **Washer Fluid**

Pull the lever to spray washer fluid on the windshield.

**REAR WIPER**

 **REAR OFF-INT-ON**

Turn the end of the lever to activate the rear wiper.

 **Rear Washer Fluid**

Push the lever to spray washer fluid on the rear window and rear camera lens◆.

See Instruments and Controls in your Owner's Manual.

## FRONT SEAT FEATURES

### SET FRONT SEAT MEMORY POSITIONS

With the ignition On or in Accessory mode:

1. Adjust the driver's seat, power steering column and power outside mirrors to the desired positions.

2. Press and release the SET button on the driver's door. A beep will sound.

3. Immediately press and hold button 1 or 2 until two beeps sound. Use the button that matches the Driver Information Center welcome message indicating driver 1 or 2.



► To store seat and power steering column positions for more clearance when exiting the vehicle, repeat the steps using the Exit button instead of button 1 or 2.

### RECALL FRONT SEAT MEMORY POSITIONS

► Press and hold button 1, 2 or Exit until the set position is reached.

The memory/exit positions can be programmed to be recalled automatically when the ignition is turned on/off. For exit recall, the driver's door must be opened.

► To set the automatic recall options, go to Settings > Vehicle > Seating Position > Seat Entry Memory and Seat Exit Memory.

See Seats and Restraints in your Owner's Manual.

## REAR SEAT FEATURES

### ENTER OR EXIT THE 3RD-ROW SEATS

1. Remove anything on the 2nd-row seat or the floor in front of the seat.

2. Pull the lever on top of the seatback (A) and pull the seat forward. The driver-side seat will tip and slide forward. The passenger-side seat will tip, pitch and slide forward for additional space. The passenger-side seat also can be moved with a forward-facing child restraint installed.



3. After entering or exiting, push or pull the seatback rearward until the seat locks in place.

### SLIDE THE 2ND-ROW SEAT

► Lift the bar under the seat cushion to slide the seat forward or rearward.


### RECLINE THE 2ND-ROW SEAT

► Pull the lever on the side of the seat cushion and move the seatback to the desired position. Release the lever.




See Seats and Restraints in your Owner's Manual.

## REAR SEAT FEATURES

### FOLD THE 2ND-ROW SEATS

- ▶ Pull the lever on the side of the seat cushion and fold the seatback forward.
- ▶ From the cargo area, press the left or right  Seat Release button (B) on the passenger's side of the vehicle to fold either seatback.
- ▶ To raise a seatback, lift it up until it locks in place.

### POWER FOLD THE 3RD-ROW SEATS♦

1. Unbuckle the seat belts and remove anything on the seats or the floor in front of the seats.
2. From the 2nd-row seats, press and hold the bottom of the left or right  Folding Seat switch (C) near the door opening.
3. From the cargo area, press and hold the bottom of the left or right  Folding Seat switch (D) on the passenger's side of the vehicle.
4. To raise the seatbacks, press and hold the top of any  Folding Seat switch (C or D).






See Seats and Restraints in your Owner's Manual.

♦ Optional equipment

## POWER LIFTGATE

### OPEN/CLOSE THE POWER LIFTGATE

- ▶ Press the  Power Liftgate button on the Remote Keyless Entry (RKE) transmitter twice.
- ▶ Press the  Power Liftgate knob on the driver's door.
- ▶ Press the touchpad above the license plate to open the liftgate.
- ▶ Press the  button next to the liftgate latch to close the liftgate.



### PROGRAMMING THE LIFTGATE HEIGHT

1. Turn the Power Liftgate knob to the 3/4 mode position.
2. Open the liftgate. Adjust it manually to the desired height.
3. To save the setting, press and hold the button next to the liftgate latch for 3 seconds. The turn signals flash and beeps sound when the setting is saved.

### HANDS-FREE OPERATION♦

- ▶ To open or close the liftgate hands-free, kick your foot straight under the rear bumper, just left of the license plate. The RKE transmitter must be within 3 feet of the liftgate. The Cadillac logo is projected on the ground near the rear bumper, indicating the kicking motion location. The logo is shown for 1 minute, depending on operating conditions.




See Keys, Doors and Windows in your Owner's Manual.

## DRIVER ASSISTANCE SYSTEMS




Safety or driver assistance features are not a substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for important feature limitations and information.


**SAFETY ALERT SEAT** – The driver's seat pulses (left, right, or both sides) to alert you of the direction of potential hazards.


- ▶ Audible alerts may be selected instead of seat-pulsing alerts. To change the alert settings, go to Settings > Vehicle > Collision/Detection Systems > Alert Type.



**LANE CHANGE ALERT WITH SIDE BLIND ZONE ALERT** – While driving, the system displays a  symbol on the left- or right-side mirror when a moving vehicle is detected rapidly approaching or is in that side blind zone. The symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

- ▶ To turn the system on or off, go to Settings > Vehicle > Collision/Detection Systems > Lane Change Alert.

**LANE KEEP ASSIST WITH LANE DEPARTURE WARNING** – The system may help you avoid collisions due to unintentional lane departures. The  Lane Keep Assist indicator is green if the system is available to assist. If the vehicle unintentionally approaches a detected lane marking, the system may assist by gently turning the steering wheel to help prevent lane departure and displays an amber . If active driver steering is not detected, the amber  may flash and the Safety Alert Seat may pulse or beeps may sound (if selected) on the side of the departure direction as the lane marking is crossed. The system does not continuously steer the vehicle; the driver needs to steer and be in complete control of the vehicle. Alerts do not occur when using the turn signal in the lane departure direction or intentional lane departure is detected.

- ▶ Press the  Lane Keep Assist button on the center of the instrument panel to turn the system on or off.


**FORWARD COLLISION ALERT** – The  Vehicle Ahead Indicator is green on the instrument cluster when a vehicle that you're following is detected ahead and is amber when following a vehicle ahead much too closely. When approaching a vehicle directly ahead too rapidly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected).

- ▶ Press the  Forward Collision Alert button on the steering wheel to set the timing to Far, Medium or Near. This is also the Adaptive Cruise Control  Following Gap setting.

**AUTOMATIC EMERGENCY BRAKING** – At speeds below 50 mph, the system works with Forward Collision Alert to help you avoid or reduce the severity of a front-end collision with a vehicle you're following. Camera technology is used to automatically provide hard emergency braking or enhance the driver's hard braking.

- ▶ To set Automatic Emergency Braking and Forward Collision Alert to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Forward Collision System.

**FOLLOWING DISTANCE INDICATOR** – The following distance to the vehicle ahead is indicated in seconds under the Info menu on the Driver Information Center. If no vehicle is detected ahead, dashes are displayed.

**FRONT PEDESTRIAN BRAKING** – During daytime driving below 50 mph, the system can detect pedestrians directly ahead and displays an amber  indicator. When approaching a detected pedestrian too quickly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected). The system may also automatically provide hard emergency braking or enhance the driver's hard braking. Nighttime and low-visibility performance are limited.

- ▶ To set to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Front Pedestrian Detection.

See Driving and Operating in your Owner's Manual.



## DRIVER ASSISTANCE SYSTEMS

**REVERSE AUTOMATIC BRAKING** – In detected, potentially imminent collision situations with some objects behind your vehicle while in Reverse, the system can provide alerts and apply hard emergency braking, if you have not already done so, to help reduce the severity or help avoid collisions at very low speeds.

- ▶ Press the **P** Park Assist button (A) on the center of the instrument panel to turn Reverse Automatic Braking and Park Assist on or off.



### FRONT AND REAR PARK ASSIST –

During low-speed parking maneuvers, the system provides “distance to closest object” information on the Driver Information Center and the Safety Alert Seat pulses or a beep sounds (if selected). When an object is very close, the Safety Alert Seat pulses or 5 beeps sound (if selected).

- ▶ Press the **P** Park Assist button (A) on the center of the instrument panel to turn the system on or off.

**REAR CROSS TRAFFIC ALERT** – When in Reverse, the system warns of detected cross traffic approaching in either direction by displaying a red triangle with directional arrow alert on the infotainment screen and the left or right side of the Safety Alert Seat pulses or beeps sound (if selected).

- ▶ To turn the system on or off, go to Settings > Vehicle > Collision/Detection Systems > Rear Cross Traffic Alert.

**HD REAR VISION CAMERA** – When the vehicle is in Reverse below 8 mph, a view of the area directly behind the vehicle displays on the infotainment screen.

**HD SURROUND VISION** – The system uses multiple cameras to display a high-resolution image of the area around your vehicle along with front- and rear-camera views on the

infotainment screen. The system operates when the vehicle is in Reverse or Drive while moving less than 8 mph. Camera view buttons (B) are at the bottom of the screen.

### AUTOMATIC PARKING ASSIST WITH BRAKING

– The Automatic Parking Assist with Braking system steers the vehicle and applies the brakes when moving at idle speed to help you park the vehicle while you follow commands and control the gear selection.

1. While driving below 18 mph, press the **P** Parking Assist button (C) on the center of the instrument panel. A parking assist display is shown on the infotainment screen. The system will begin searching for a large enough parking space.
2. To switch between parallel and perpendicular parking, touch the Parking Type screen button. To search for a parking spot to the right or left, touch the Parking Side screen button.
3. Once a space is found, shift the vehicle into Reverse or Drive as directed and follow the instructions on the infotainment screen. The vehicle automatically steers and brakes, moving at idle speed into a detected parking space. The driver must follow the instructions, select gears, and override braking and acceleration as needed. Parking Complete will be displayed and a beep will sound when the parking maneuver is complete.

See *Driving and Operating* in your Owner's Manual.

## DRIVER ASSISTANCE SYSTEMS

### REAR CAMERA MIRROR

**MIRROR** – The rear camera mirror provides a wider, less-obstructed field of view than a traditional mirror to assist when driving, changing lanes and checking traffic conditions.



#### A. On/Off

Pull or push the lever at the bottom of the mirror to turn the video display on or off.

#### B. Selection Control

Press and release the button to select the brightness, tilt or zoom setting.

#### C. Adjustment

Press and release either button to adjust the selected setting.

See **Keys, Doors and Windows** in your Owner's Manual.

## TIRE PRESSURE MONITORING SYSTEM

The **Low Tire Pressure** warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures listed on the Tire and Loading Information label, located below the driver's door latch. Current tire pressures can be viewed on the Driver Information Center.

Read your Owner's Manual for information about normal monthly tire maintenance and using the Tire Fill Alert system.

See **Vehicle Care** in your Owner's Manual.

## TRACTION CONTROL

The traction control system limits wheelspin in difficult driving conditions. The system turns on automatically every time the vehicle is started. Turn off traction control if the vehicle is stuck and rocking the vehicle is required.

 
- ▶ Press the **Traction Control** button on the center console to turn traction control off or on again. The **Traction Control Off** light will illuminate on the instrument cluster when the system is off.

See **Driving and Operating** in your Owner's Manual.

## ULTRAVIEW SUNROOF

### OPEN/CLOSE THE SUNSHADE

- ▶ Press the rear or front of the **Sunshade** switch (A) to express-open or express-close the sunshade. Press again to stop movement.

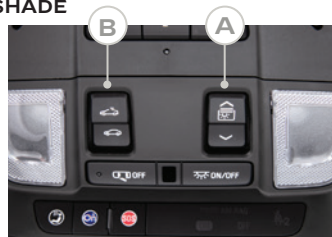

### OPEN/CLOSE THE SUNROOF

 
 
- ▶ Press the rear of the **Sunroof** switch (B) to vent the sunroof. Press again to express-open the sunroof.
- ▶ Press and hold the rear of the **Sunroof** switch (B) to open the sunroof to a desired position. The sunroof will stop when the switch is released.
- ▶ Press the front of the **Sunroof** switch (B) to express-close the sunroof.

See **Keys, Doors and Windows** in your Owner's Manual.

## REAR CARGO COVER ♦

### CARGO COVER INSTALLATION

1. Fold the 3rd-row seats.
2. Insert the 3rd-row seat belts into the clips (A) on the side panels.
3. Unfold the cargo cover until the center hinge of each crossbar clicks.
4. Insert the longer crossbar into the slots on each side panel near the 2nd-row seats.
5. Insert the shorter crossbar into the slots on each side panel near the liftgate opening.
6. Attach the clips to the tie-downs (B).

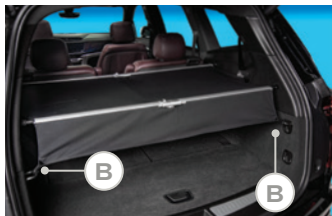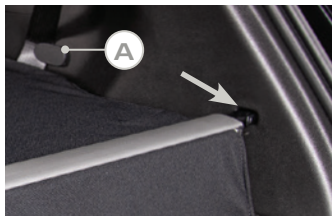

### CARGO COVER REMOVAL

1. Unhook the clips from the tie-downs.
2. Slide the release button to fold the shorter crossbar, followed by the longer crossbar.



## REAR CARGO COVER ♦

3. Fold the crossbars and roll up the cover. Place the cover in the storage bag and store under the cargo floor.

See Storage in your Owner's Manual.



## CENTER CONSOLE STORAGE AREA

A storage area is located under the front of the center console for use by front seat passengers. The storage area features an accessory power outlet for electrical equipment.

See Instruments and Controls in your Owner's Manual.



# OWNER PRIVILEGES™

## ROADSIDE ASSISTANCE

1-800-224-1400

TTY Users: 1-888-889-2438

Roadside Assistance provides every Cadillac owner with the advantage of contacting a Cadillac advisor and, when appropriate, a Cadillac-trained dealer technician who can provide on-site services, including towing service, battery jump starting, lock-out service, fuel delivery and flat-tire assistance. Services are provided for up to 6 years/70,000 miles, whichever occurs first.

### OnStar® Roadside Assistance

If you have a current OnStar Safety & Security plan, press the blue OnStar button or red Emergency button (for emergencies only) to get the help you need. An OnStar advisor will use GPS technology to pinpoint your vehicle location and contact the nearest service provider.

To learn more about OnStar services, press the blue OnStar button, visit [onstar.com](http://onstar.com), call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

## CUSTOMER ASSISTANCE

1-800-458-8006

Cadillac Customer Assistance is available anytime to answer questions or provide additional information.

### myCADILLAC MOBILE APP

Download the myCadillac app to your compatible smartphone (or device) and, if your vehicle is properly equipped, you can use your device to start or turn off your engine, lock or unlock your doors, view key diagnostic information, set parking information and more.

The app is available on select Apple and Android devices. Service availability, features and functionality vary by vehicle, device and data plan. Device data connection required. Visit [onstar.com](http://onstar.com) for more details. Download the mobile app from your compatible mobile device's app store.

### MY CADILLAC ACCOUNT

Create an account at [cadillac.com/owners](http://cadillac.com/owners) to access personalized information, including an online Owner's Manual and helpful how-to videos; track your service history and warranty status; manage your OnStar and Connected Services vehicle plans; review your current Vehicle Diagnostics report (active service account required); and more.

**We recommend always using ACDelco or GM Genuine Parts.**

Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Certain restrictions, precautions, and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. Copyright 2022 General Motors LLC. All Rights Reserved.

85004165 A



85004165