RAM 1500 Classic

QUICK START GUIDE

Cluster Display Control Buttons

Cruise Control Buttons

Ignition Switch

Gear Selector

Automatic Dimming Mirror

Upper Glove Compartment

Climate Controls

Lower Glove Compartment

Light Controls

Hood Release

4WD Controls

Bed Extender

FUNCTIONAL POSITIONS:

- Extender
- Divider
- Storage

DIVIDER
FOR MANAGING CARGO

EXTENDER
FOR LOADING BEYOND
THE TAILGATE

STORAGE
FOLDS UP IN FRONT OF CARGO AREA WHEN NOT IN USE

KEEP IN MIND:
The bed extender should always be properly locked when installed in each position.

HomeLink®

GARAGE DOOR OPENER

(1) While the car is ON, hold the handheld garage door transmitter 1-3 inches from the HomeLink® button you want to program in the vehicle.

(2) Push and hold both the HomeLink® button being programmed and the button on the garage door transmitter.

TO ERASE ALL SET CHANNELS:
Push and hold the two outside HomeLink® buttons for 20 seconds until the orange indicator flashes. An individual channel cannot be erased.

(?) ROLLING OR NON-ROLLING?
Check your garage door opener motor in your garage for a "LEARN" or "TRAIN" button by the hanging antenna. If you have one of these, you have a Rolling Code garage door opener.

(3) **For Non-Rolling Code** garage door openers, watch for the indicator light to go constant.

For Rolling Code garage door openers, watch for the indicator light to go from a slow blink to blinking rapidly.

(4) **For Rolling Code** garage door openers only, firmly push and release the "LEARN" or "TRAIN" button on your garage door opener motor in your garage, then push the HomeLink® button in your vehicle for two long holds.

(5) If the programming was successful, your garage door should open and close with your chosen HomeLink® button.

For more detailed instructions, see "Universal Garage Door Opener (HomeLink®)" in your Owner's Manual. Please call 1-800-355-3515 if you require assistance.

Scan me

Connected Services

WITH CONNECTED SERVICES YOU CAN...

🔒 **Lock Your Vehicle**

🔓 **Unlock Your Vehicle**

↻ **Remote Start Your Vehicle**

✕ **Cancel Remote Start**

📯 **Activate Your Horn**

ACTIVATE YOUR REMOTE SERVICES

1. Press "Apps" on the touchscreen.
2. Press "Activate Services".
3. Press "Activate Now".
4. There are two ways to activate: via email or via an agent. On the next page, you can either enter your name and email, or press "Call An Agent" to directly speak with an agent.

TIP:

You can use your remote commands from the Uconnect App, your Owner's Site account, or by calling an agent.

However, not all remote commands will work when calling the agent.

Mopar® YOUR Way

REAP THE BENEFITS OF YOUR OWNER'S PROFILE

Get an online experience all your own—tailored to you and your vehicle—accessible anytime, anywhere.

24/7 ACCESS TO EVERYTHING YOU NEED

🚗 Custom dashboard for every vehicle in your garage

🛠 Access to your vehicle's Owner's Manual, warranty & more

📅 Ability to set preferred dealer & schedule service with ease

➕ Maintenance records and up-to-date vehicle health reports**

💲 Special offers on exceptional Mopar® service at your dealership

📶 Remote vehicle commands right from your mobile device**

**Requires a SiriusXM Guardian™ subscription

*Canadian residents are not required to create a profile, as one is created when a SiriusXM Guardian™ account is activated.

UTILIZE YOUR SERVICES & OWNER PROFILE

Pair a Phone

Scan me

1 Make sure Bluetooth® is enabled on your mobile device.

2 With the vehicle in the ACC or ON/RUN position, press the Phone button on the vehicle's touchscreen menu bar.

3 Press "Pairing" and then press "Paired Phones and Audio Devices".

4 Select "Add Device" then follow the prompts on your phone and on the touchscreen.

KEEP IN MIND:
Some mobile phones will require you to enter a PIN as part of the connection process.

For more detailed connecting instructions, refer to "Phone Operation" in your Uconnect radio book.

Ready to remove a phone or audio device?

1. Press the "Pairing" button on the touchscreen.
2. Press "Paired Phones and Audio Devices".
3. Press "Settings" next to the phone or device you want to remove.
4. Press "Delete Device".
5. Press "X" to exit the settings screen. The device should be removed.

YOU MAY ALSO BE ABLE TO CONNECT YOUR APPS

If your vehicle is equipped with Android Auto™ & Apple CarPlay®, connect your unlocked smartphone to one of the media USB ports in your vehicle.

Once connected and recognized, the Android Auto™ or Apple CarPlay® icon will replace the phone icon on your personalized menu bar.

KEEP IN MIND:

For Android™ Users, if the Android Auto™ App was not previously downloaded, it will download the first time you plug in your device.

For Apple® Users, Apple CarPlay® is only compatible with iPhone5® or later and requires Siri being enabled in "Settings".

Automatic Climate Controls

Rotating the **Blower Control knob** regulates the amount of air forced through the system in any mode.
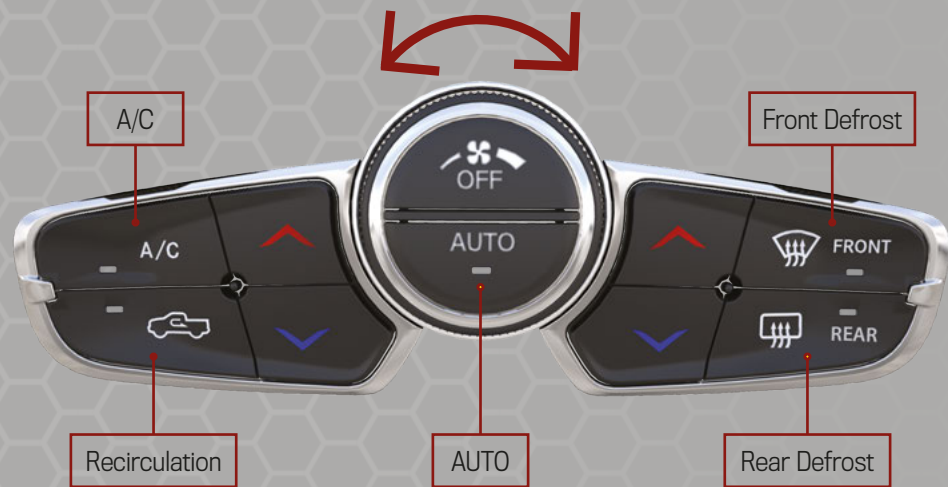
A/C

Front Defrost

Recirculation

AUTO

Rear Defrost

Manual Climate Controls

The **Blower Control knob** will regulate the amount of air forced through the system in any mode.

The **Temperature Control knob** will regulate the temperature of the air inside the passenger compartment.

The **Mode Control knob** allows selection of the airflow distribution modes.

The **Recirculation button** will toggle between recirculation mode and outside air mode.

The **A/C button** will engage the Air Conditioning (A/C) system.

The **Rear Defrost button** will turn on the rear window defroster and heated outside mirrors (if equipped).

CONTROL YOUR CLIMATE

Lights & Wipers

PUSH
TO ACTIVATE HIGH BEAMS

PULL
FOR FLASH-TO-PASS

PUSH END & RELEASE
TO MIST THE WINDSHIELD

PUSH END & HOLD
TO ACTIVATE THE WINDSHIELD WASHER

Lights Off

Parking Lights & Instrument Panel Lights

Automatic Headlights

Headlights, Parking Lights, & Instrument Panel Lights

Fog Lights

Cargo Light

Dimmer Control Switch

Scan me
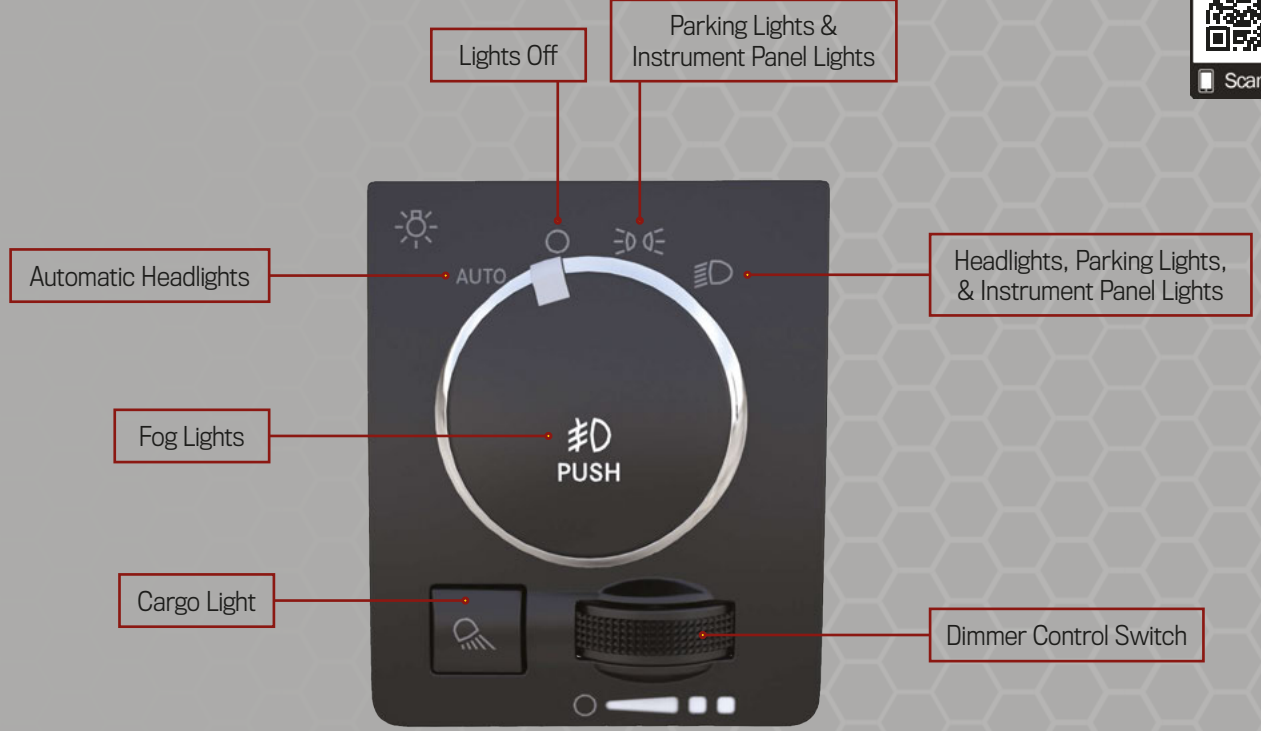
Warning & Indicator Lights

| Symbol	Description	Symbol	Description	Symbol	Description	Symbol	Description	Symbol	Description
	Air Bag		Battery Charge		Brake		Door Open		Electric Power Steering Fault
	Electronic Throttle Control (ETC)		Engine Coolant Temperature		Oil Pressure		Oil Temperature		Seat Belt Reminder
	Trailer Brake Disconnected		Vehicle Security		4WD		4WD Lock		4WD Low
	Anti-Lock Brake System (ABS)		Cargo Light		Electronic Stability Control (ESC) Active		Electronic Stability Control (ESC) OFF		Engine Check/ Malfunction
	Loose Fuel Filler Cap		Low Coolant Level		Low Fuel		Low Washer Fluid		NEUTRAL
	Service 4WD		Tire Pressure Monitoring System (TPMS)		TOW/HAUL		Trailer Merge Assist		Transmission Temperature
	4WD AUTO		Cruise Control SET With 7-Inch Cluster Display		Front Fog Lights		Parking Lights/ Headlights On		Stop/Start Active
	Turn Signal		Cruise Control Ready		Cruise Control SET With 3.5-Inch Cluster Display		High Beam		

For additional information on any of the topics in this publication, please refer to your Owner's Manual.